

Capture the Movie Shot by Your DVD Handycam!

How to capture the movies shot by your Handycam into your computer via USB connection

Preparation

Before starting

- Connect included USB cable to your DVD Handycam.
- Set your DVD Handycam to play/edit mode before turning on.
- Disconnect other peripheral devices.

1

Starting Capture Environment

Start “ImageMixer” and click the [Capture Environment] button in the Main Selector.



When “ImageMixer” has already been started and you are on a different environment, click the [Capture Environment] button in the Selector Bar on the top left of the screen.




2

Selecting DV Camcorder Capture Mode

Click the [DV Camcorder Capture Mode] button.



[DV Camcorder Capture Mode] button

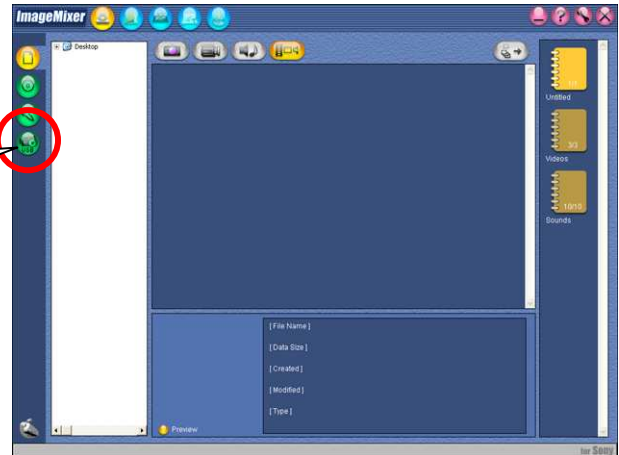

Movies recorded in your DVD Handycam are displayed in the list.

【Reference】

Please re-connect if movies are not displayed or your computer fails in connecting with DVD Handycam.




3

Selecting movies

Select the movie to capture.

【Reference】

- If you want to select all movies, press [A] key while pressing down [Ctrl] key of the keyboard.
- If you want to select more than two movies, select your desired movie while pressing down [Ctrl] key of the keyboard.

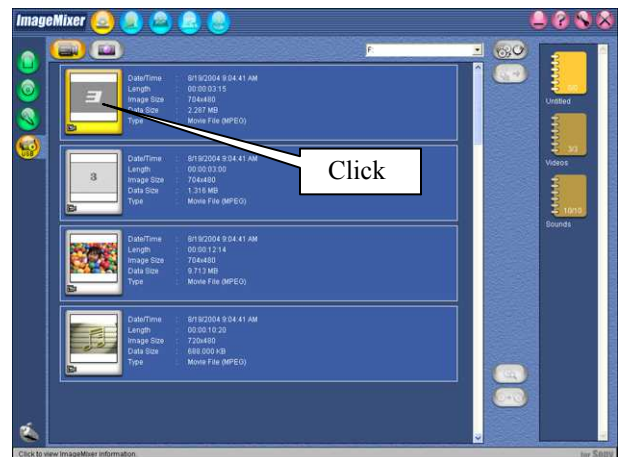

4

Importing selected movies


Make sure that movies are selected, then click the [Import] button.



[Import] button

【 Reference 】

Movies turn out yellow when selected.

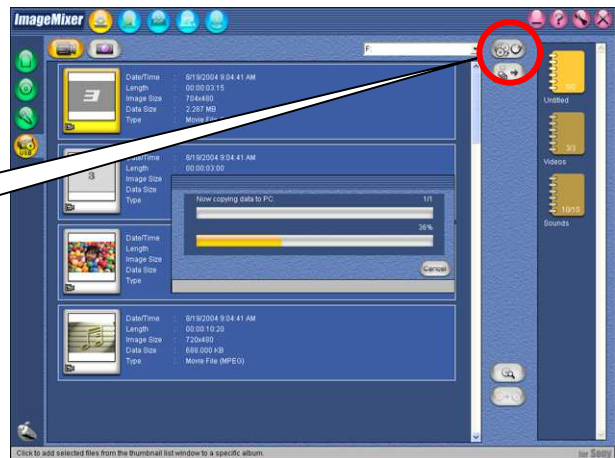

5

Checking imported movies

Click the [Album Environment] button.



[Album Environment] button

Make sure that movies are displayed.

Import finishes when movies are displayed.

